


TN sistem za izradu staklenih pregradnih vrata




PVS TN set za staklena vrata - 2 usp.



set siva 6313


PVD TN gornja šina AL SM

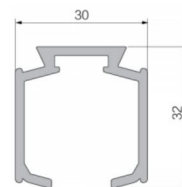


2m	SM	7832
3m	SM	7833
4m	SM	7834

Tehnički crteži i prikaz montaže mehanizma


Prihvatnik za staklena vrata

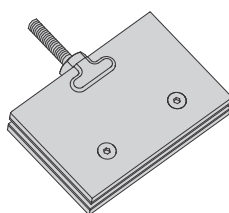



Raspored rupa i dimenzije za gornje prihvatnike vrata


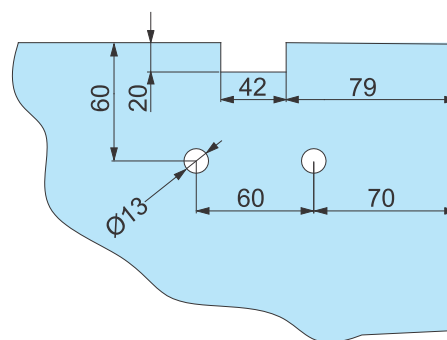


PVD TN gornja šina AL SM

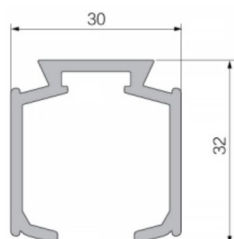


Donji usmerivač pravca

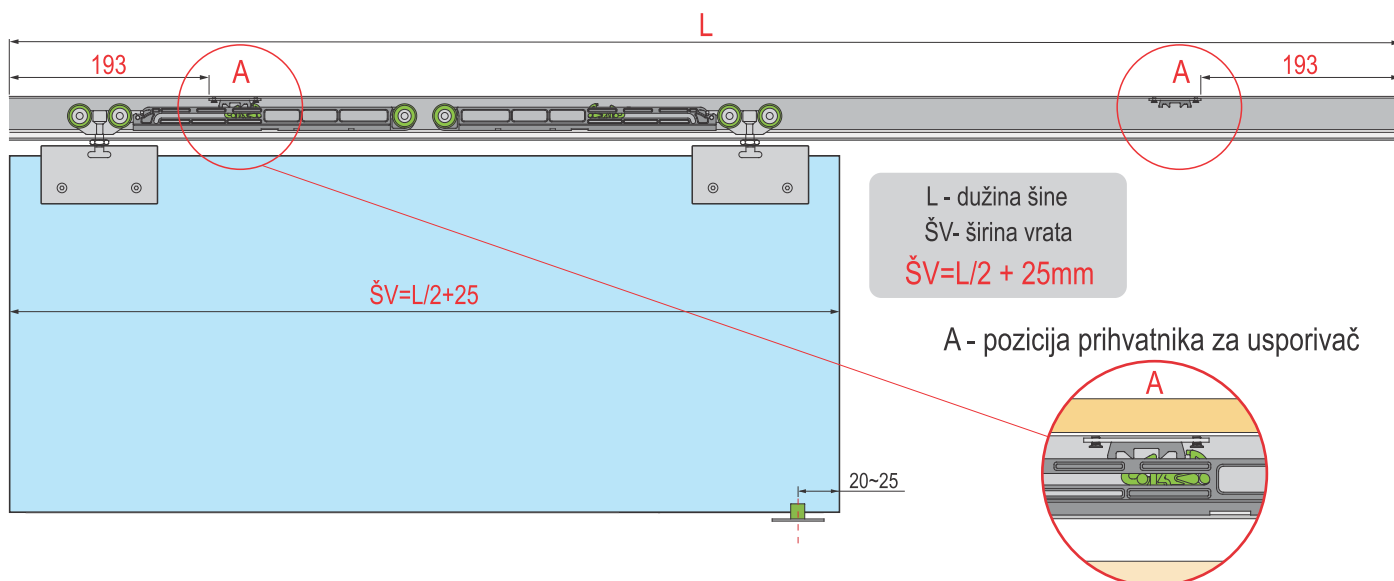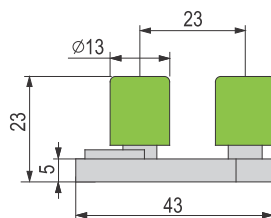





Tehnički crteži i prikaz montaže mehanizma

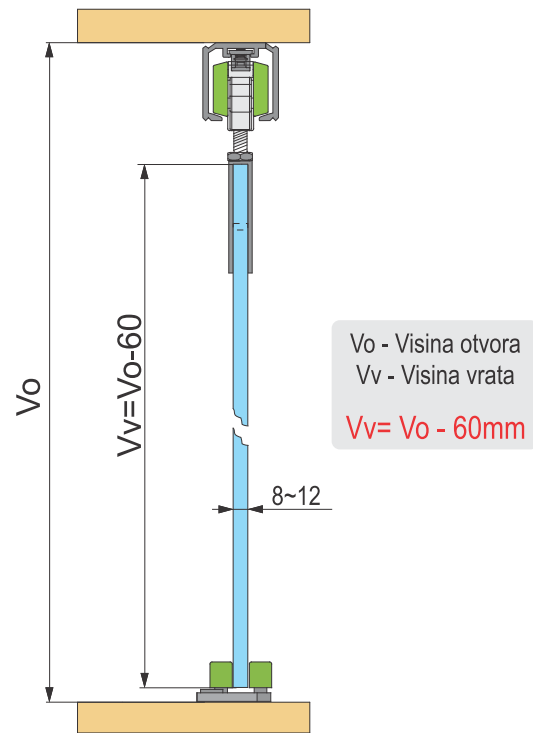


1 Pozicionirati usporivače i prihvatnike za usporivače

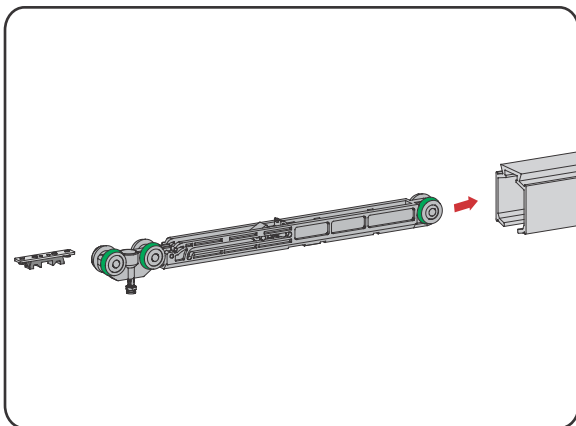

2 Pričvrstiti gornju šinu kao i donji usmerivač pravca

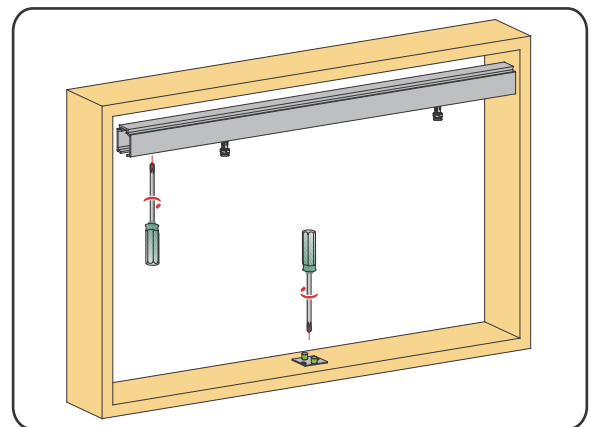

3 Pozicionirati i pričvrstiti montažne pločice na vrata

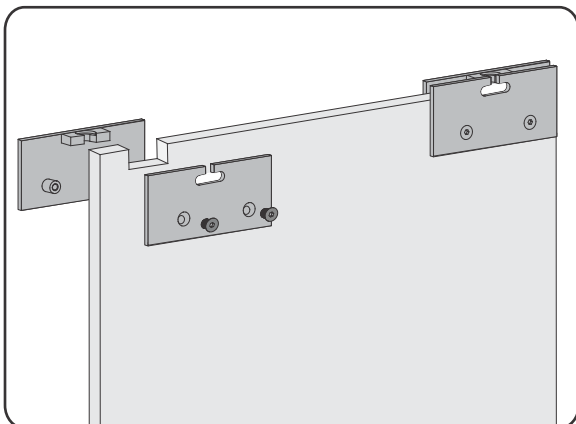

4 Montirati vrata na mehanizme koji su u gornjoj šini

